



 
FORTH-DVB-T2-01



Please follow the **SETTING STEPS** to set Remote Controller so as to control your electronic appliances effectively.


**Front and Rear Panel**

**1. Front Panel**

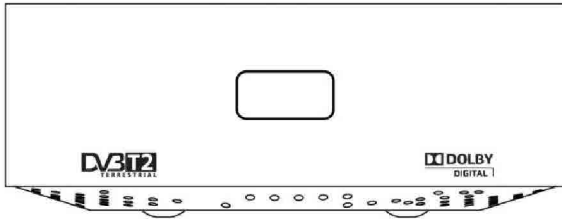


1. LED DISPLAY WINDOW : Display channel number.
2. REMOTE CONTROL SENSOR : Receive the signal from the remote control.

**2. Rear Panel**

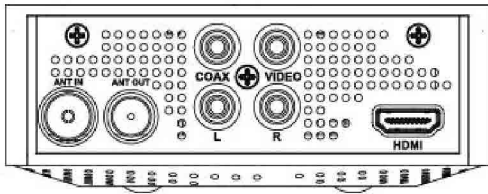

1. Y : Connect to TV set Y input terminal
2. Cb/Pb : Connect to TV set Cb/Pb input terminal
3. Cr/Pr : Connect to TV set Cr/Pr input terminal
4. VIDEO : Connect to TV set Video input terminal
5. L : Connect to TV set L audio input terminal
6. R : Connect to TV set R audio input terminal
7. COAX : Connect to Amplifier Coaxial input terminal
8. HDMI : Connect to TV set HDMI input terminal
9. RF LOOP THROUGH : To TV Loop Out connector
10. The aerial input connector

**3. Side Panel**

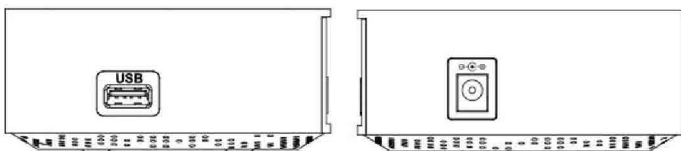

1. USB : USB port for connecting storage devices.
2. AC IN : Power supply 90~240V


1. **STANDBY**: Switch the Set Top Box on or to standby mode.
2. **EPG**: (Electronic Program Guide) Call up the EPG
3. **INFO**: Show information of the current program
4. **AUDIO**: Select an Audio Language or Audio Mode
5. **PVR**: Record a TV program.
6. **MENU**: Press this button to run menu on screen and all command box
7. **RIGHT/LEFT**: Navigate through the Menus.
8. **FAVOURITE**: Display or edit the favourite program list
9. **UP/DOWN**: Navigate through the Menus. Select the next or previous Channel.
10. **0-9(Numeric Buttons)**: Select a channel or setting.
11. **FWD**: Search forward during media play.
12. **REV**: Search backward during media play,
13. **PLAY/PAUSE**: Pause media playback or start Timeshift function.
14. **MUTE**: Mute or Restore Audio Output.
15. **TTX**: Display Teletext contents
16. **SUBTITLE**: Select Subtitles Language.
17. **EXIT**: Exit the current Menu or returns to the previous Menu
18. **OK**: Select the highlighted item. Confirm the function
19. **TV/RADIO**: Switch between TV and Radio mode
20. **RECALL**: Return to the last selected channel.
21. **Navi**: Navigation bar.
22. **NEXT**: Skip to the next track during playing.
23. **PREV**: Return to the previous track during playing.
24. **REPEAT**: Turn on/off repeat mode.
25. **STOP**: Stop media play,
26. **Colour buttons**: Operate different functions in TEXT screen.
27. **TIMER**: Open the scheduled recordings list and menu.



**Connections**



Make sure to check the voltage specification of the wall outlet is the same rating with the receiver. To prevent the risk of electric shock, do not open the cover or the back of the receiver.

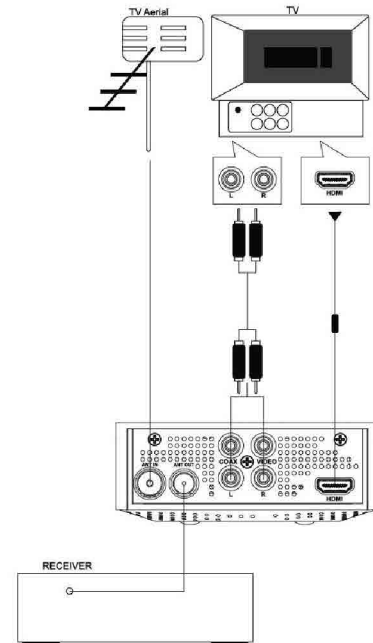

When connecting the receiver to other equipment, e.g., TV, VCR and amplifier, make sure to refer to relevant user manual for instruction. Also, make sure you disconnect all the equipments from the power before connecting.